

Quick Guide



Create Flat Pad

Allows operator to create a flat, level surface. (Lift Layers, etc.)

You can choose between:

- **Last Used:** Loads last used pad elevation.
- **Read GPS:** Sets elevation from GPS position of vehicle, rod, etc.
- **Enter Elevation:** Enter a desired elevation.

